



**Genetec**  
**Patroller.™**

**Genetec Patroller Mobile License Plate  
Inventory User Guide 6.5**

Document last updated: June 15, 2018

# Legal notices

---

©2018 Genetec Inc. All rights reserved.

Genetec Inc. distributes this document with software that includes an end-user license agreement and is furnished under license and may be used only in accordance with the terms of the license agreement. The contents of this document are protected under copyright law.

The contents of this guide are furnished for informational use only and are subject to change without notice. Genetec Inc. assumes no responsibility or liability for any errors or inaccuracies that may appear in the informational content contained in this guide.

This publication may not be copied, modified, or reproduced in any form or for any purpose, nor can any derivative works be created therefrom without Genetec Inc.'s prior written consent.

Genetec Inc. reserves the right to revise and improve its products as it sees fit. This document describes the state of a product at the time of document's last revision, and may not reflect the product at all times in the future.

In no event shall Genetec Inc. be liable to any person or entity with respect to any loss or damage that is incidental to or consequential upon the instructions found in this document or the computer software and hardware products described herein.

Genetec™, AutoVu™, Citywise™, Community Connect™, Genetec Citigraf™, Federation™, Flexreader™, Genetec Clearance™, Genetec Retail Sense™, Genetec Traffic Sense™, Genetec Airport Sense™, Genetec Motoscan™, Genetec Mission Control™, Genetec ClearID™, Genetec Patroller™, Omnicast™, Stratocast™, Streamvault™, Synergis™, their respective logos, as well as the Mobius Strip Logo are trademarks of Genetec Inc., and may be registered or pending registration in several jurisdictions.

KiwiSecurity™, KiwiVision™, Privacy Protector™ and their respective logos are trademarks of KiwiSecurity Software GmbH, and may be registered or pending registration in several jurisdictions.

Other trademarks used in this document may be trademarks of the manufacturers or vendors of the respective products.

Patent pending. Genetec™ Security Center, Omnicast™, AutoVu™, Stratocast™, Citigraf™, Genetec Clearance™, and other Genetec™ products are the subject of pending patent applications, and may be the subject of issued patents, in the United States and in other jurisdictions worldwide.

All specifications are subject to change without notice.

## Document information

Document title: Genetec Patroller Mobile License Plate Inventory User Guide 6.5

Document number: EN.400.046-V6.5C1(1)

Document update date: June 15, 2018

You can send your comments, corrections, and suggestions about this guide to [documentation@genetec.com](mailto:documentation@genetec.com).

# About this guide

---

This guide explains how to use Genetec Patroller and includes basic troubleshooting information for some of the more common issues you may encounter. It is intended for Genetec Patroller operators.

For administrator information on how to install and configure Genetec Patroller™, see the *Genetec Patroller™ Administrator Guide*.

This guide assumes that Genetec Patroller™ is using default configuration settings. If the default settings have been modified, your version of Genetec Patroller™ may look or behave differently than what is described in this guide. Regardless of how your version of Genetec Patroller™ is configured, you should be able to grasp the basic concepts and functionality.

Genetec Patroller™ is designed to be used on a tablet computer or laptop with a touchscreen interface. Therefore, the procedures in this guide use terms that apply to a touchscreen interface when describing actions. For example, you'll see “tap” or “touch” instead of “click”, or “swipe” instead of “scroll”. If you're using a laptop, you can always perform the same actions using your laptop's touchpad and keyboard.

## Notes and notices

The following notes and notices might appear in this guide:

- **Tip.** Suggests how to apply the information in a topic or step.
- **Note.** Explains a special case, or expands on an important point.
- **Important.** Points out critical information concerning a topic or step.
- **Caution.** Indicates that an action or step can cause loss of data, security problems, or performance issues.
- **Warning.** Indicates that an action or step can result in physical harm, or cause damage to hardware.

**IMPORTANT:** Topics appearing in this guide that reference information found on third-party websites were accurate at the time of publication, however, this information is subject to change without prior notice from Genetec Inc.

# Contents

---

## Preface

Legal notices . . . . .	ii
About this guide . . . . .	iii

## Chapter 1: Introducing Genetec Patroller

What is Genetec Patroller . . . . .	2
Workflow for Mobile License Plate Inventory . . . . .	3
Logging on to Genetec Patroller . . . . .	5
Logging off from Genetec Patroller . . . . .	6
Genetec Patroller main window for MLPI . . . . .	7
Notification bar in Genetec Patroller . . . . .	10

## Chapter 2: Working With Genetec Patroller

Searching for license plates in Genetec Patroller . . . . .	13
About the Hits button in Genetec Patroller . . . . .	14
About hotlist hits in MLPI . . . . .	14
Accepting hits in Genetec Patroller . . . . .	16
Rejecting hits in Genetec Patroller . . . . .	17
Reviewing acknowledged hits in Genetec Patroller . . . . .	18
Hit accept reasons in Genetec Patroller . . . . .	19
Hit reject reasons in Genetec Patroller . . . . .	20
Enforced hit attributes in Genetec Patroller . . . . .	21
Selecting hotlists . . . . .	22
Editing reads in Genetec Patroller . . . . .	23
Performing past read matching in Genetec Patroller . . . . .	24
Deleting reads in Genetec Patroller . . . . .	25
Selecting your current location in Genetec Patroller . . . . .	26
Manually capturing license plates in Genetec Patroller . . . . .	27
Adding New Wanted plates in Genetec Patroller . . . . .	28
Managing New wanted entries in Genetec Patroller . . . . .	29
Offloading your data to Security Center from Genetec Patroller . . . . .	30
Using the Patroller Transfer Tool . . . . .	32
Configuring your Genetec Patroller options . . . . .	34
Changing your password in Genetec Patroller . . . . .	35
Viewing your Genetec Patroller statistics . . . . .	36
Viewing your downloaded plate lists in Genetec Patroller . . . . .	38
Checking the status of AutoVu components . . . . .	39
Viewing your list of error messages in Genetec Patroller . . . . .	40
Checking your Genetec Patroller version . . . . .	41
Turning Sharp cameras on and off . . . . .	42
Sharp camera icons . . . . .	43
Video window in Genetec Patroller . . . . .	44
Updating Genetec Patroller or Sharp Cameras . . . . .	45
Automatic rollback in Genetec Patroller . . . . .	46
Rolling back Genetec Patroller or Sharp updates . . . . .	46

## Chapter 3: Using the custom MLPI application on the handheld computer

Starting the custom MLPI application . . . . .	48
Selecting a location in Genetec Patroller . . . . .	49
Capturing license plate information in Genetec Patroller . . . . .	51
Importing data into Security Center from Genetec Patroller . . . . .	53

## Chapter 4: Troubleshooting

Troubleshooting: Blank screen when Genetec Patroller system starts . . . . .	55
Troubleshooting: Log on failed (invalid credentials) in Genetec Patroller . . . . .	56
Troubleshooting: Log on failed (locked user account) in Genetec Patroller . . . . .	57
Troubleshooting: Genetec Patroller is running but not receiving plate reads . . . . .	58
Troubleshooting: Sharp losing connectivity and live feed not working . . . . .	59
Troubleshooting: Genetec Patroller not generating hits for plates on a known hotlist . . . . .	60
Troubleshooting: Manual capture of plate on a known hotlist not generating a hit in Genetec Patroller . . . . .	61
Troubleshooting: Offload takes longer than usual in Genetec Patroller . . . . .	62
Troubleshooting: Sharp not detected after docking in-vehicle computer . . . . .	63
Troubleshooting: Cannot review acknowledged hits in Genetec Patroller . . . . .	64
Troubleshooting: Problems after upgrading Genetec Patroller . . . . .	65
Troubleshooting: Blue screen in Context Camera screen in Sharp Portal . . . . .	66

Where to find product information . . . . .	67
---	----

Technical support . . . . .	68
-----------------------------	----

# Introducing Genetec Patroller

This section includes the following topics:

- ["What is Genetec Patroller"](#) on page 2
- ["Workflow for Mobile License Plate Inventory "](#) on page 3
- ["Logging on to Genetec Patroller "](#) on page 5
- ["Logging off from Genetec Patroller "](#) on page 6
- ["Genetec Patroller main window for MLPI"](#) on page 7
- ["Notification bar in Genetec Patroller"](#) on page 10

## What is Genetec Patroller™

---

Genetec Patroller™ is the AutoVu™ software application installed on an in-vehicle computer. Genetec Patroller™ connects to Security Center and is controlled by the LPR Manager.

Depending on your AutoVu™ solution, Genetec Patroller™ can be used to do the following:

- Verify license plates read from LPR cameras against lists of vehicles of interest (hotlists) and vehicles with permits (permit lists).
- Alert you of hotlist, permit, or overtime hits so that you can take immediate action.
- Collect data for time-limited parking enforcement.
- Collect license plate reads to create and maintain a license plate inventory for a parking facility.

## Workflow for Mobile License Plate Inventory

This section provides an overview of a typical Mobile License Plate Inventory workflow. Depending on how Genetec Patroller™ is configured, some of these tasks may not apply to your particular situation.

### Before you begin your patrol

These are the common tasks to perform before you begin patrolling. If you can't complete the tasks on this checklist, contact the Genetec Patroller™ administrator before starting your patrol.

Task	Description	Where to find more information
<input type="checkbox"/> Log on	If this is the first time you're logging on, you may need to change your initial password.	<ul style="list-style-type: none"> <li>• <a href="#">Logging on to Genetec Patroller™</a> on page 5</li> </ul>
<input type="checkbox"/> Check cameras	Check the video feed of the Sharp(s) to see that they are working.	<ul style="list-style-type: none"> <li>• <a href="#">Turning Sharp cameras on and off</a> on page 42</li> <li>• <a href="#">Video window in Genetec Patroller™</a> on page 44</li> </ul>
<input type="checkbox"/> Check Genetec Patroller™ connection status	If the status indicator on the notification bar is red, it means there's an error with Genetec Patroller™. Tap the indicator for more information.	<ul style="list-style-type: none"> <li>• <a href="#">Notification bar in Genetec Patroller™</a> on page 10</li> <li>• <a href="#">Viewing your list of error messages in Genetec Patroller™</a> on page 40</li> </ul>
<input type="checkbox"/> Check Genetec Patroller™ download status	Tap the download status indicator on the notification bar to verify that Genetec Patroller™ downloaded the required hotlists.	<ul style="list-style-type: none"> <li>• <a href="#">Notification bar in Genetec Patroller™</a> on page 10</li> <li>• <a href="#">Viewing your downloaded plate lists in Genetec Patroller™</a> on page 38</li> </ul>
<input type="checkbox"/> Select the Parking facility and location	Select the Genetec Patroller™ location (sector and row) in the parking facility.	<ul style="list-style-type: none"> <li>• <a href="#">Selecting your current location in Genetec Patroller™</a> on page 26</li> </ul>

### During your patrol

These are the tasks to perform as you're patrolling.

Task	Description	Where to find more information
<input type="checkbox"/> Change the Parking facility location	If you decide not to follow the predefined route or want to change your location (sector and row) in the parking facility.	<ul style="list-style-type: none"> <li>• <a href="#">Selecting your current location in Genetec Patroller™</a> on page 26</li> </ul>
<input type="checkbox"/> Automatically collect plates	Collect plates automatically using Genetec Patroller™ application and a Sharp camera or cameras.	<ul style="list-style-type: none"> <li>• <a href="#">Genetec Patroller™ main window for MLPI</a> on page 7</li> </ul>



Task	Description	Where to find more information
<input type="checkbox"/> Respond to hotlist hits	Hotlists contain information on stolen vehicles, scofflaws, amber alerts, and so on.	<ul style="list-style-type: none"> <li>• <a href="#">About the Hits button in Genetec Patroller™</a> on page 14</li> </ul>
<input type="checkbox"/> Manually capture a plate using Genetec Patroller™	Capture a plate manually, such as when a plate is very dirty and cannot be read by the Sharp.	<ul style="list-style-type: none"> <li>• <a href="#">Manually capturing license plates in Genetec Patroller™</a> on page 27</li> </ul>
<input type="checkbox"/> (Optional) Manually capture a plate using the handheld computer	Capture a plate manually, such as when capturing a plate read requires the driver to get out of the vehicle.	<ul style="list-style-type: none"> <li>• <a href="#">Starting the custom MLPI application</a> on page 48</li> </ul>
<input type="checkbox"/> Perform past read matching	Match previously captured reads with a new or updated hotlist.	<a href="#">Performing past read matching in Genetec Patroller™</a> on page 24

## After your patrol is finished

These are the tasks to perform after you've finished patrolling.

Task	Description	Where to find more information
<input type="checkbox"/> Review acknowledged hits	Review the hits you enforced or did not enforce during your patrol.	<a href="#">Reviewing acknowledged hits in Genetec Patroller™</a> on page 18
<input type="checkbox"/> Offload data	Depending on how your system is configured, you can offload data wirelessly to Security Center, a folder on the in-vehicle computer, or a flash drive.	<a href="#">Offloading your data to Security Center from Genetec Patroller™</a> on page 30
<input type="checkbox"/> (Optional) Import data from handheld computer to Security Center	If you used the handheld computer to capture plates. Import the data into Security Center.	<a href="#">Importing data into Security Center from Genetec Patroller™</a> on page 53
<input type="checkbox"/> Log off	Depending on how your system is configured, logging off may occur automatically when you offload data.	<a href="#">Logging off from Genetec Patroller™</a> on page 6

# Logging on to Genetec Patroller™

---

Genetec Patroller™ administrators determine what credentials you need to log on to Genetec Patroller™.

## What you should know

You may need to enter the following:

- Username only.
- Username and password.
- The username and password you use to log on to the Genetec Patroller™ computer.

### To log on to Genetec Patroller™:

- 1 If Genetec Patroller™ does not start automatically when you start your computer, go to **Start > All programs > Genetec AutoVu™ 6.5**, and then tap **Genetec Patroller™**.
- 2 Enter your username and/or password, if required.
- 3 Tap **OK**.

The Genetec Patroller™ main window appears.

## Logging off from Genetec Patroller™

---

Depending on how Genetec Patroller™ is configured, there are different options available when you log off.

### To log off Genetec Patroller™:

- 1 Close the Genetec Patroller™ window.

The Genetec Patroller™ log off window appears.

**NOTE:** To cancel your log off, tap outside the log off screen.

- 2 From the log off screen, choose one of the following options:
  - **Logout:** Logs off Genetec Patroller™ without closing the application.
  - **Shutdown:** Logs off Genetec Patroller™, closes the application, and shuts down your system.
  - **Exit:** Logs off Genetec Patroller™ and closes the application.
  - **Offload and Exit:** Offloads data to Security Center before logging off Genetec Patroller™ and closing the application.
  - **Rollback:** Rolls back the current version of Genetec Patroller™ to the previous version.

### Related Topics

[Rolling back Genetec Patroller or Sharp updates](#) on page 46

# Genetec Patroller™ main window for MLPI

This section introduces you to the main components of Genetec Patroller™. More information on each component is provided in the different sections of this guide.



<b>A</b> Notification bar	<p>The information displayed in the notification bar depends on how Genetec Patroller™ is configured.</p> <p>Generally, you'll see basic information, such as the current time and date, your Genetec Patroller™ username, parking facility rules, and so on. There are also icons to notify you if a connection has been lost, or if an offload didn't complete in a previous session.</p> <p><b>NOTE:</b> If Genetec Patroller™ requires an update, you'll see the update icon appear (🔧) in the notification bar.</p>
<b>B</b> Search	Search for captured reads and hits.
<b>C</b> Plate review reel	<p>See plate reads live as they occur.</p> <p>You can review reads and hits from the plate review reel, and search for specific license plates.</p> <ul style="list-style-type: none"> <li>To view more information about a read, tap the item on the plate review reel.</li> <li>To navigate through the list, swipe the plate review reel left or right, or touch and hold the left and right arrows.</li> </ul>
<b>D</b> Selected read	Tap a read to review it in the information panel.

---

<b>E</b>	Go live button	Tap to resume tracking live reads.
<b>F</b>	Camera	Displays which camera detected the read.
<b>G</b>	License plate value	Tap to modify the read. In order to modify a read, the <b>Enable read modification</b> option must be turned on in Patroller Config Tool.
<b>H</b>	Delete read	Tap to delete the read. In order to delete a read, the <b>Enable read deletion</b> option must be turned on in Patroller Config Tool.
<b>I</b>	Information panel	See information about a read or hit such as the LPR image, zone, and so on. You can also modify and delete plate reads from the information panel.
<b>J</b>	Main viewer	Displays the context image of the vehicle.
<b>K</b>	Zoom controls	Control the behavior of the Main viewer. <ul style="list-style-type: none"><li>• To zoom in, tap the (+) button.</li><li>• To zoom out, tap the (-) button.</li></ul>

---

---

L	Pause/Resume reading	Pauses and resumes plate reading for all Sharps installed on the vehicle.
---	----------------------	---

---


M	Toolbar	<ul style="list-style-type: none"><li>• <b>Hits:</b> Allows you to see all hits.</li><li>• <b>Previous:</b> Allows you to move to the previous location (sector and row) in your route.</li><li>• <b>Next:</b> Allows you to move to the next location (sector and row) in your route. <b>NOTE:</b> When you tap <b>Previous</b> or <b>Next</b>, the location is automatically updated in the Notification bar.</li><li>• <b>Parking facility:</b> Allows you to choose whether you want to patrol a predefined route or a specific area, and the starting point for the patrol.</li><li>• <b>Manual Capture:</b> Capture a license plate by typing the plate information manually.</li><li>• <b>New wanted:</b> Manually add a license plate to the patrol vehicle's local database on the in-vehicle computer, so Genetec Patroller™ can generate a hit if the plate is captured. New wanted license plate values are not part of any hotlist files and not pushed to any other patrol vehicles or Security Center.</li><li>• <b>Offload:</b> Offload LPR data at the end of a shift.</li><li>• <b>Options:</b> Adjust basic Genetec Patroller™ options such as volume.</li><li>• <b>Status:</b> View Genetec Patroller™ statistics, download status, diagnostics, error messages, and version information.</li><li>• <b>Cameras:</b> Turn plate reading on or off for any individual Sharp camera installed on your vehicle. The icon displayed on the toolbar changes depending on how many Sharps are installed on the vehicle. For example, if you have two Sharps installed (one on the front left and one on the front right) you will see the “Both” arrow icon. When you have cameras installed on the rear of the vehicle, the cameras icon is displayed.</li><li>• <b>Video:</b> View the live video feed from the Sharp's LPR camera or context camera.</li></ul>
---	---------	--

---

## Notification bar in Genetec Patroller™

The Genetec Patroller™ notification bar reflects the mode you are working with and displays useful information such as the time/date, the Genetec Patroller™ name, and so on. Icons also exist to help you determine if there are connection issues, if Genetec Patroller™ requires an update, or if there are still plate reads pending for offload.

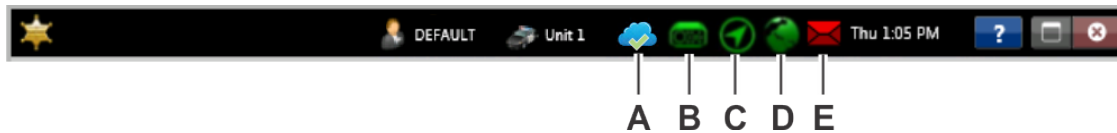

The appearance of the notification bar varies depending on which Genetec Patroller™ mode you are working in and how Genetec Patroller™ is configured. If you are not using a GPS device, the GPS connection status icon won't appear, just as the Security Center connection status icon won't appear when you are working with Genetec Patroller™ Standalone. The following example, illustrates the notification bar in Law Enforcement mode.



<b>A</b> Plate link icon	<p>The icon shows whether or not Genetec Patroller™ is using Plate link to share plate reads with other patrol vehicles.</p> <ul style="list-style-type: none"> <li>When you enter an overtime zone or select a permit, a <i>Downloading reads</i> message is displayed. To ensure that all violations are detected, it is recommended that you wait until the <i># reads downloaded</i> message is displayed and the Plate link icon displays a check mark (📶) before continuing the patrol.</li> <li>Arrows on the Plate link icon indicate whether plate reads are being uploaded or downloaded (📶). If plate reads are buffered in the system, a number indicates the number of reads that are awaiting transmission (📶).</li> </ul>
<b>B</b> Camera connection status icon	<p>The icon changes color depending on the connection status of your cameras. If Genetec Patroller™ loses the connection to a camera, a sound alerts you of the change and the icon turns red. The icon will also indicate how many cameras are not connected. Tap the icon to open the Status window for more information about the problem.</p>
<b>C</b> GPS connection status icon	<p>The icon changes color depending on the connection status of your GPS device. If Genetec Patroller™ loses its connection to the GPS device, a sound alerts you of the change and the icon turns red. Tap the icon to open the Status window for more information about the problem.</p> <p><b>NOTE:</b> If no GPS is being used this icon does not appear.</p>
<b>D</b> Security Center connection status icon (not applicable to Genetec Patroller™ Standalone)	<p>The icon changes color depending on the connection status of Security Center. If Genetec Patroller™ loses its connection to Security Center, a sound alerts you of the change and the icon turns red. Tap the icon to open the Status window for more information about the problem.</p>
<b>E</b> Error message icon	<p>Indicates there is an error message waiting with more information. Tap the icon to open the Messages tab on the Status page for more information about the error. Once you've tapped the icon it will disappear from the notification bar.</p>

The connection status icons are always present in the notification bar, whereas the following icons only appear as needed.

**NOTE:** These icons are not applicable to Genetec Patroller™ Standalone.

- **Genetec Patroller™ update icon** () . This icon displays when you need to update Genetec Patroller™ or a connected Sharp.
- **Offload icon** () . (Live transfer only) This icon displays when an offload was not able to complete in a previous offload session. You can click the icon in the notification bar to perform the offload immediately or wait until a later time to do it.

### Related Topics

[Offloading your data to Security Center from Genetec Patroller](#) on page 30



# Working With Genetec Patroller

This section includes the following topics:

- ["Searching for license plates in Genetec Patroller"](#) on page 13
- ["About the Hits button in Genetec Patroller"](#) on page 14
- ["Accepting hits in Genetec Patroller"](#) on page 16
- ["Rejecting hits in Genetec Patroller"](#) on page 17
- ["Reviewing acknowledged hits in Genetec Patroller"](#) on page 18
- ["Hit accept reasons in Genetec Patroller"](#) on page 19
- ["Hit reject reasons in Genetec Patroller"](#) on page 20
- ["Enforced hit attributes in Genetec Patroller"](#) on page 21
- ["Selecting hotlists"](#) on page 22
- ["Editing reads in Genetec Patroller"](#) on page 23
- ["Performing past read matching in Genetec Patroller"](#) on page 24
- ["Deleting reads in Genetec Patroller"](#) on page 25
- ["Selecting your current location in Genetec Patroller"](#) on page 26
- ["Manually capturing license plates in Genetec Patroller"](#) on page 27
- ["Adding New Wanted plates in Genetec Patroller"](#) on page 28
- ["Managing New wanted entries in Genetec Patroller"](#) on page 29
- ["Offloading your data to Security Center from Genetec Patroller"](#) on page 30
- ["Using the Patroller Transfer Tool"](#) on page 32
- ["Configuring your Genetec Patroller options"](#) on page 34
- ["Changing your password in Genetec Patroller"](#) on page 35
- ["Viewing your Genetec Patroller statistics"](#) on page 36
- ["Viewing your downloaded plate lists in Genetec Patroller"](#) on page 38
- ["Checking the status of AutoVu components"](#) on page 39
- ["Viewing your list of error messages in Genetec Patroller"](#) on page 40
- ["Checking your Genetec Patroller version"](#) on page 41
- ["Turning Sharp cameras on and off"](#) on page 42
- ["Video window in Genetec Patroller"](#) on page 44
- ["Updating Genetec Patroller or Sharp Cameras"](#) on page 45
- ["Automatic rollback in Genetec Patroller"](#) on page 46

## Searching for license plates in Genetec Patroller™


The Search option allows you to search Genetec Patroller™'s list of captured reads and hits for a specific license plate.

### What you should know

Genetec Patroller™ administrators can specify that information be deleted from the database after you've performed an offload. In this case, you won't be able to search for data that has been offloaded.

#### To search for a license plate:

- 1 In the main Genetec Patroller™ window, tap **Search**.

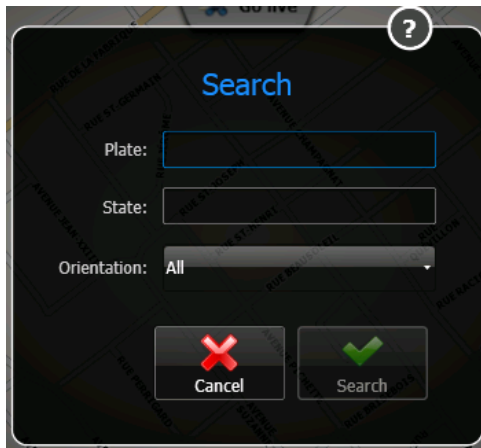

- 2 Enter a full or partial license plate. You can also use OCR equivalent characters in your search.
 

**Example:** If you want to find plates that contain the letters “ABC”, type only ABC in the **Plate** field. The results will include any plates that contain ABC or A8C because B is an OCR equivalent character.
- 3 (Optional) If you want to narrow your search results, enter a state/province.
 

**NOTE:** Depending on the context, your system may not support detecting and displaying the state/province for a read. The state/province is usually only included for hits that belong to a hotlist where the Administrator configured the state/province information.
- 4 (Optional) If you have two or more Sharps installed and you want to narrow your search results, then select the orientation of the camera.
- 5 Tap **Search**.

Genetec Patroller™ displays the license plates that match your search criteria in the Genetec Patroller™ plate review reel.

### After you finish

Tap **Search** again to clear your search results, or tap **Go live** to continue viewing live plate reads.

## About the Hits button in Genetec Patroller™

You can use the **Hits** button on the Genetec Patroller™ toolbar to review the full list of unacknowledged hits. The hits appear in the plate review reel in the order that they occurred.

Depending on how Genetec Patroller™ is configured, the Genetec Patroller™ plate review reel may automatically switch from displaying reads to displaying unacknowledged hits. Genetec Patroller™ continues to read plates in the background.

### About hotlist hits in MLPI

Hotlists define a list of wanted vehicles, where each vehicle is identified by a license plate number, the issuing state, and the reason why the vehicle is wanted (stolen, wanted felon, Amber alert, VIP, and so on). Optional vehicle information might include the model, the color, and the vehicle identification number (VIN).

Genetec Patroller™ administrators can configure the color of hotlist hits.





A Currently selected hit

The plate review reel shows all unacknowledged hits. The selected hit is highlighted.

- Tap a hit on the list to see more information about it in the hit panel and information panel.
- Tap *Go live* to return to live plate reading.

---

<b>B</b>	Hit panel	<p>Displays information about the hit such as the Category, Make, and so on. The “matched plate (state)” information is particularly useful as it lets you know which plate on the hotlist generated the hit.</p> <ul style="list-style-type: none"><li>• If the matched plate is identical to the plate on the hotlist, a small icon of a checkmark  appears next to the matched plate.</li><li>• If the matched plate contains OCR equivalent characters, or there is a difference in the number of characters between the matched plate read and the plate number on the hotlist, an approximation symbol  appears next to the matched plate.</li></ul> <p>For more information about OCR equivalence and allowing for differences in the number of characters, see the <i>Security Center Administrator Guide</i>.</p>
<b>E</b>	Information panel	Shows information on the vehicle and plate.
<b>F</b>	Unacknowledged hits	Tap <i>Hits</i> to display the list of all unacknowledged hits.

---

## Accepting hits in Genetec Patroller™

---

When you receive a hit that is valid, you accept it. For example, if the matched plate for the hit is identical to the plate on the hotlist, you accept the hit.

### What you should know

- In some configurations, Genetec Patroller™ automatically accepts and enforces every hit without any user interaction required. Genetec Patroller™ administrators can enable this option in Patroller Config Tool.
- When a hit is accepted and not enforced the plate that generated the hit is not removed from the hotlist. Therefore if the plate is read again, it will generate another hit.
- After you acknowledge a hit (accept or reject it) and choose whether to enforce it or not, Genetec Patroller™ removes it from the main list of unacknowledged hits.
- When a Sharp camera captures a license plate read, the system notifies you by emitting a sound.

**NOTE:** If the patrol vehicle is equipped with front and rear-facing cameras, the system might be configured to fuse the reads from the cameras. The fusion process delays the audible notification by about 3 seconds.

### To accept a hit:

- 1 From the main Genetec Patroller™ window, tap **Hits**.  
The unacknowledged hit list appears in the plate review reel.
- 2 Tap a hit and review the information in the Hit panel and Information panel.
- 3 Tap **Accept**.  
Depending on which mode you are working in and how Genetec Patroller™ is configured, you may be required to provide additional information when accepting a hit.
- 4 If applicable, specify whether to Enforce the hit by clicking **Enforce** or **Do not Enforce**.  
Depending on which mode you are working in and how Genetec Patroller™ is configured, when a hit is enforced you may be required to enter additional information.
- 5 Tap **Go live** and continue patrol.

### Related Topics

[Reviewing acknowledged hits in Genetec Patroller](#) on page 18

[Hit accept reasons in Genetec Patroller](#) on page 19

[Enforced hit attributes in Genetec Patroller](#) on page 21

## Rejecting hits in Genetec Patroller™

---

When you receive a hit that is not valid, you reject it. For example, if the hotlist that generated the hit is obsolete, you would reject the hit.

### What you should know

- When a hit is rejected the plate that generated the hit is not removed from the hotlist. Therefore if the plate is read again, it will generate another hit.
- After you acknowledge a hit (accept or reject it) and choose whether to enforce it or not, Genetec Patroller™ removes it from the main list of unacknowledged hits.

### To reject a hit:

- 1 From the main Genetec Patroller™ window, tap **Hits**.

The unacknowledged hit list appears in the plate review reel.

- 2 Tap a hit and review the information in the Hit panel and Information panel.
- 3 Tap **Reject**.

You can review rejected hits by tapping the **Review** button in the hits window.

Depending on which mode you are working in and how Genetec Patroller™ is configured, you may be required to provide additional information when rejecting a hit.

### Related Topics

[Reviewing acknowledged hits in Genetec Patroller](#) on page 18

[Hit reject reasons in Genetec Patroller](#) on page 20

## Reviewing acknowledged hits in Genetec Patroller™

You can review all the hits that you accepted or rejected, and then enforced or not enforced.

### What you should know

After you acknowledge a hit (accept or reject it) and choose whether to enforce it or not, Genetec Patroller™ removes it from the main list of unacknowledged hits.

#### To review your acknowledged hits:

- 1 From the main Genetec Patroller™ window, tap **Hits**.

The list of unacknowledged hits appears.

- 2 Tap **Review**.

You'll see hits you've chosen to enforce or not enforce in the plate review reel.

**NOTE:** The following screenshot is an example. The information displayed in the window varies depending on the Genetec Patroller™ mode you are running.



# Hit accept reasons in Genetec Patroller™

Hit accept reasons allow you to provide more information about a hit to Genetec Patroller™ administrators. Depending on how Genetec Patroller™ is configured, you may be required to provide this additional information when accepting a hit.

Genetec Patroller™ administrators create and configure these requirements in Security Center Config Tool. For example, you may be required to enter the driver's age.





## Hit reject reasons in Genetec Patroller™

Hit reject reasons allow you to provide more information to Genetec Patroller™ administrators if you reject a hit. Depending on how Genetec Patroller™ is configured, you might be required to provide this additional information when rejecting a hit.

Genetec Patroller™ administrators create and configure these requirements in Security Center Config Tool. For example, Genetec Patroller™ may have misread the license plate.



# Enforced hit attributes in Genetec Patroller™

Enforced hit attributes allow you to provide more information to Genetec Patroller™ administrators if you enforce a hit (issued a ticket). Depending on how Genetec Patroller™ is configured, you may be required to provide this additional information when enforcing a hit.

Genetec Patroller™ administrators create and configure these requirements in Security Center Config Tool. For example, you may be required to specify the vehicle's make and color.



## Selecting hotlists

The Hotlists window allows you to select which hotlist(s) you want to use to generate license plate hits.


### What you should know

You may have more than one hotlist available in Genetec Patroller™. You can choose the hotlists that apply to your current patrol area or the time of day.

**NOTE:** The possibility to select Hotlists is enabled by an administrator of the system. If this feature has not been enabled, the **Hotlist** icon will not be available.

#### To select one or more hotlists to compare license plates:

- 1 In the main Genetec Patroller™ window, tap **Hotlists**. The following screen appears:

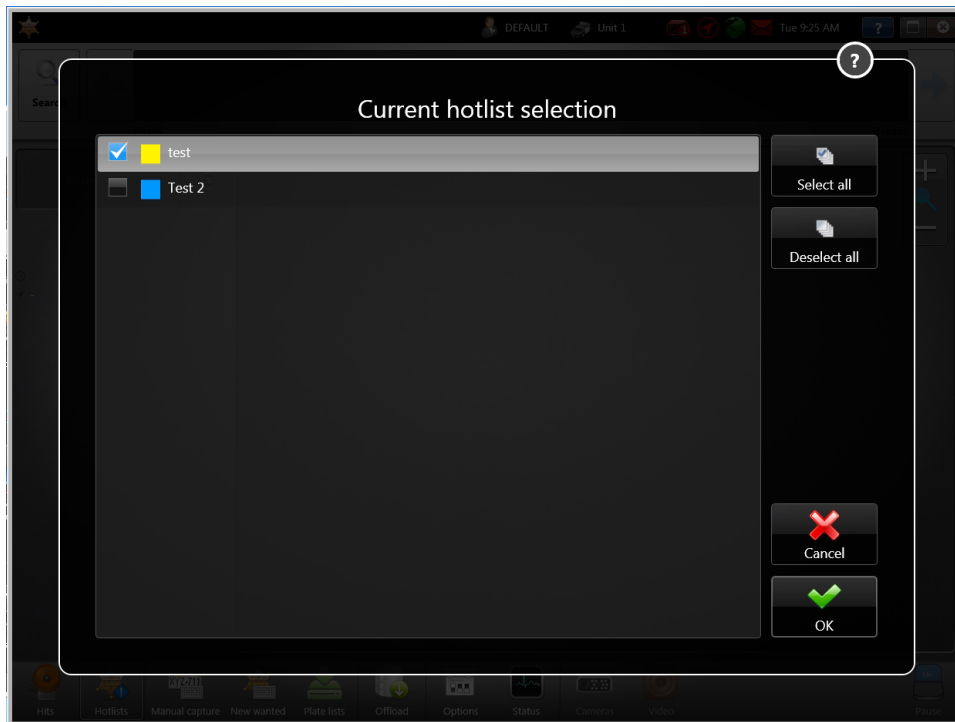

- 2 Select one or more hotlists from the list.
- 3 Click **OK**.

The **Hotlists** icon shows now a blue exclamation mark that indicates that not all hotlists are enabled.



Enabled hotlists can be modified at any time.

## Editing reads in Genetec Patroller™

If a plate is misread and you want to correct it before offloading the data, you can edit the plate numbers from the information panel of the Genetec Patroller™ main window.

### Before you begin


Turn on the **Enable plate editing** setting in Patroller Config Tool. For more information about enabling this option, see the *Genetec Patroller™ Administrator Guide*.

### What you should know

- You cannot edit a hit after it has been accepted or enforced.
- Reads can no longer be edited after an offload.
- An edited read replaces the original read.

#### To edit a plate read:

- 1 From the main Genetec Patroller™ window, tap the plate read in the information panel. The edit read dialog box opens.

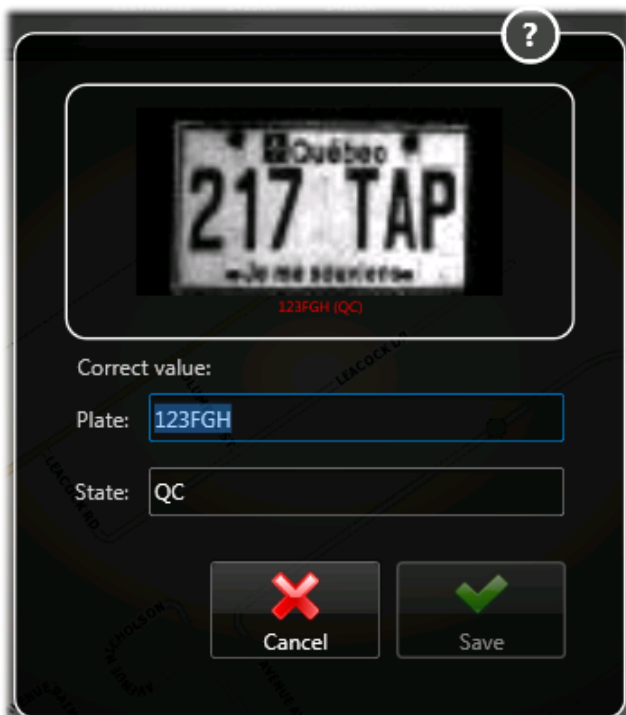

- 2 Enter the correct value.
- 3 Tap **OK**.

#### Related Topics

[Selecting your current location in Genetec Patroller](#) on page 26

## Performing past read matching in Genetec Patroller™

To match previously captured reads in the Genetec Patroller™ database to plates on a new or updated hotlist, you can use past read matching.

### Before you begin


Enable past read matching in Patroller Config Tool, and specify how far back (in hours) you want to search in the Genetec Patroller™ database. For more information about enabling this option, see the *Genetec Patroller™ Administrator Guide*.

### What you should know

- When a new or updated hotlist is available in Genetec Patroller™, you are prompted to start past read matching immediately. If you choose to ignore the prompt, you can perform past read matching at a later time using the *Plate lists* screen.
- During the past read matching process, Genetec Patroller™ does not process reads.
- If an offload is in progress, the past read matching process will not start until the offload has completed.

### To perform past read matching:

- 1 From the main Genetec Patroller™ window, tap **Plate lists**.

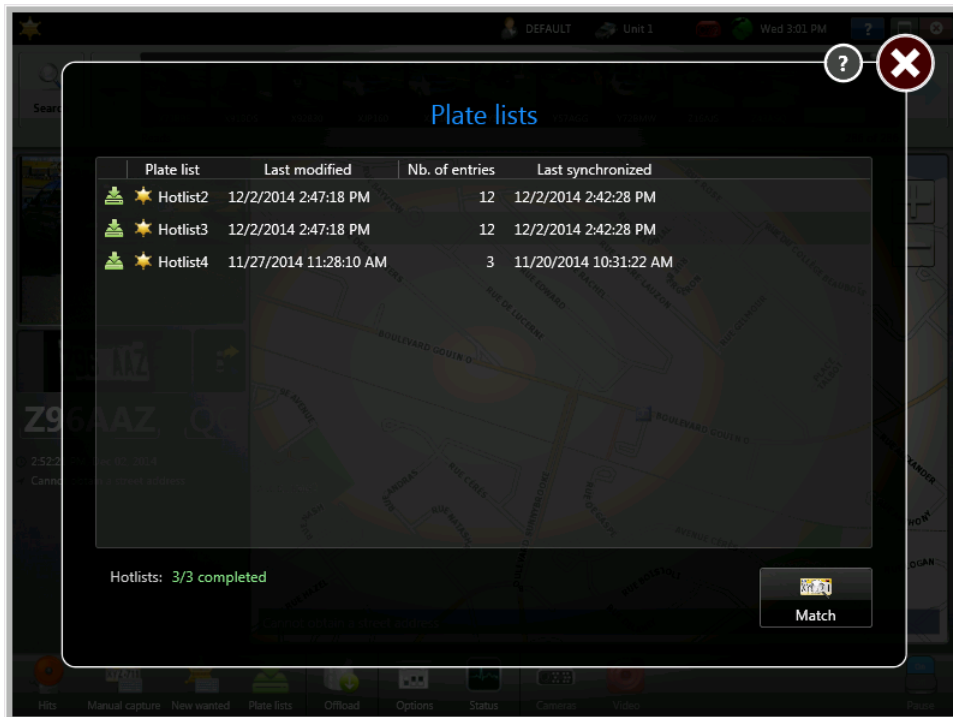

- 2 Tap **Match > Start**.

Genetec Patroller™ searches through previous reads in the database, and indicates if there are any matches or hits with the new plates.

## Deleting reads in Genetec Patroller™

To correct any mistakes before the plate data is offloaded, you can delete the plate read from the information panel of the Genetec Patroller™ main window. For example, if you have misreads, or did a sweep but specified the wrong location before you started, you can delete those reads before they are offloaded to Security Center.

### Before you begin


- Turn on the **Enable read deletion** setting in Genetec Patroller™ Config Tool Operation page. For more information about turning on this option, see the *Genetec Patroller™ Administrator Guide*.
- The plate read must be associated to a specific location in a Parking facility. [Select your current location](#).

### What you should know

You cannot modify plate reads that were captured manually, plate reads that are already offloaded, or hits.

#### To delete a plate read:

- 1 In the main Genetec Patroller™ window, tap the  button in the information panel. This opens the **Delete read** dialog box.

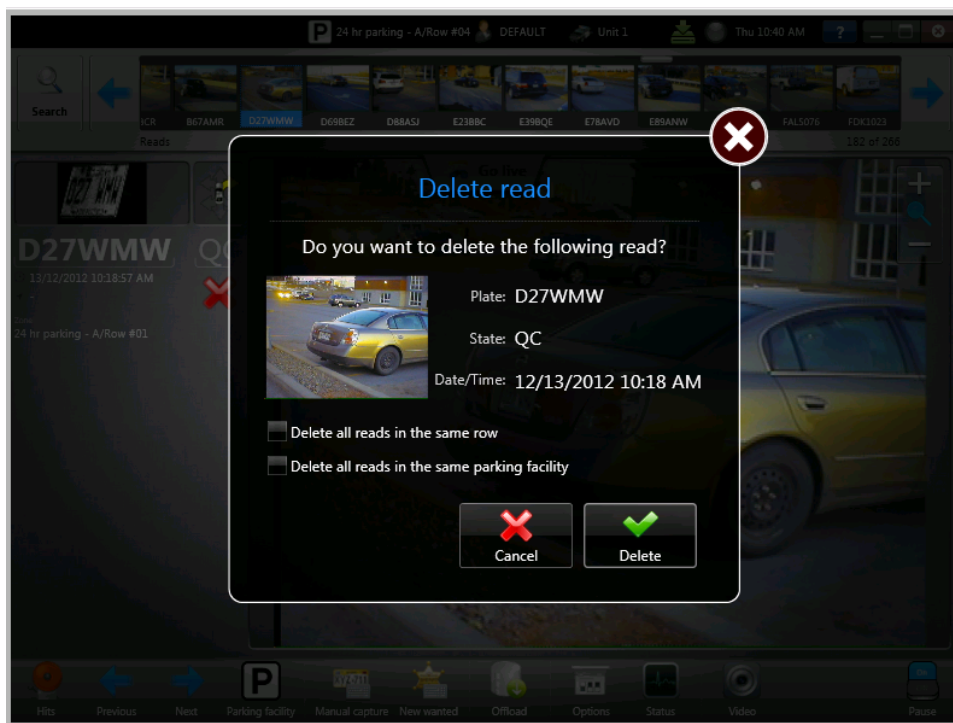

- 2 Choose one of the following:
  - **Delete all reads the same row:** Allows you to delete all the reads for the current location (sector or row) of the Parking facility.
  - **Delete all reads in the same parking facility:** Allows you to delete all reads in the parking facility. If no selection is made, only the displayed read will be deleted.
- 3 Tap **Delete**.

The selected reads are deleted.

### Related Topics

[Selecting your current location in Genetec Patroller](#) on page 26

## Selecting your current location in Genetec Patroller™

Before you can start patrolling, you can select your current location in the parking facility. From your current location, you can choose to follow a route, or patrol a specific row in a sector.

### What you should know

The parking facility configuration is based on the parking facility entity that was created in Security Center Config Tool.

#### To select your current location:

- 1 In the main Genetec Patroller™ window, tap **Parking facility**.



- 2 Choose one of the following:

- **Route:** Allows you to select the starting point (sector and row) of the predefined route configured in the Parking facility entity. The route forms a closed circuit. For example, in the screenshot above, sector A/Row #04 is the starting point and sector A/Row#03 is the last location on your route.  
**NOTE:** The Genetec Patroller™ can deviate from the predefined route at anytime, but the current location must be reset.
- **Configuration:** Allows you to select the starting point (sector and row) to patrol a specific area in the parking facility.
- **None:** Sets the Parking facility to None.

- 3 Tap **OK**.

The current location is selected and you can start patrolling.

## Manually capturing license plates in Genetec Patroller™

If a plate cannot be automatically read by a camera, you can manually capture a plate to add to the Genetec Patroller™ database.

### Before you begin

(MLPI only) Select your current location before entering the plate information otherwise the read will not be part of the inventory.

### To manually capture a license plate:

- 1 In the main Genetec Patroller™ window, tap **Manual capture**.



- 2 Enter the following information:
  - **Plate:** The license plate number you want to capture.
  - **State:** The plate's issuing state or province.
  - **Orientation:** The camera you want to use to capture the context image. By default, Genetec Patroller™ automatically selects the camera that was used for the previous read.

This option is only available when you have two or more Sharps installed. If the camera used to take the previous read is disconnected or turned off, the orientation defaults to the first camera listed on the *Units* tab of the *Cameras* page in Patroller Config Tool. For more information, see the *Genetec Patroller™ Administrator Guide*.

- 3 Tap **Add**.

The plate is captured, and Genetec Patroller™ generates a hit if applicable.

### Related Topics

[Selecting your current location in Genetec Patroller](#) on page 26



## Adding New Wanted plates in Genetec Patroller™

If you are searching for a specific plate that isn't on the hotlists that are loaded in Genetec Patroller™, you can manually add a license plate to Genetec Patroller™'s local database by adding *New wanted* plates.

### To add *New wanted* plates:

- 1 In the main Genetec Patroller™ window, tap **New wanted**.



- 2 Enter the following information:

- **Plate:** The license plate number.
- **State:** The license plate's issuing state (or province).
- **Category:** Category of the New wanted entry (e.g. stolen vehicle, scofflaw, etc). Please note that in Genetec Patroller™ Standalone this option is automatically set to **None**.

The remaining fields are created and configured by Genetec Patroller™ administrators. The options shown in this example are for illustration purposes only.

- 3 Tap one of the following:

- **Add:** Tap this to add the New wanted entry to Genetec Patroller's local database.
- **Add & Match:** Tap this to add the New wanted entry to Genetec Patroller's local database and see if the plate matches any plate reads that occurred in the past.

**NOTE:** This button is only available when **Enable past read matching** is turned on in Patroller Config Tool.

The **New wanted** entry is added. Genetec Patroller™ generates a hit if the plate is captured, or matches a read that was captured in the past.

## Managing New wanted entries in Genetec Patroller™


After you have added one or more *New wanted* entries, you can add, edit, delete, and search for specific entries in the list all within Genetec Patroller™.

### What you should know

Genetec Patroller™ administrators can disable this option in Genetec Patroller™ Config Tool.

#### To manage *New wanted* entries:

- 1 In the main Genetec Patroller™ window, tap **New wanted**, and then tap **Manage**.

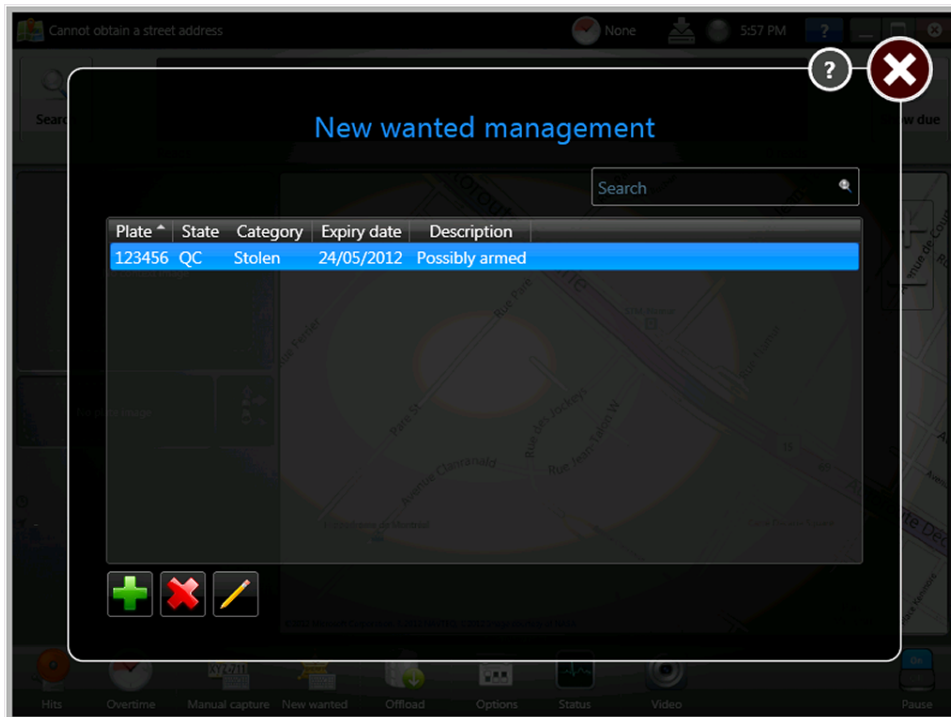

- 2 Do one of the following:

- Tap add (+), delete (X), or edit (pencil) to manage the entries on the list.
- Type a plate number or other vehicle information in the **Search** field.

# Offloading your data to Security Center from Genetec Patroller™

You can offload data directly to Security Center if you have a wireless connection available (e.g. if you are in range of the wireless network), or you can offload to a local folder on your in-vehicle computer.

## What you should know

The Offload screen is where you offload your data to Security Center. Genetec Patroller™ administrators pre-configure the offload method. If you offload to a local file, you'll then need to copy the offload data to a Flash drive in order to transfer the data to Security Center. You can also use this screen to delete all reads if you need to abandon the inventory sweep.


If for some reason an offload cannot complete, the next time you start Genetec Patroller™ you will see a yellow offload icon (🟡) in the notification bar to indicate that there are still pending reads to be offloaded. Click directly on the icon to start the offload immediately. Alternatively, you can perform the offload at a later time using the *Offload* screen.

### To offload your data to Security Center:

- 1 In the main Genetec Patroller™ window, tap **Offload**.

**NOTE:** The following screenshot is an example. The information displayed in the window varies depending on the Genetec Patroller™ mode you are running.

Depending on how Genetec Patroller™ is configured, you'll see the total number of reads and hits, or the reads and hits since your last offload. You'll also see the time and date of your last offload (if applicable). If there are warnings, they are displayed at the bottom of the dialog box.

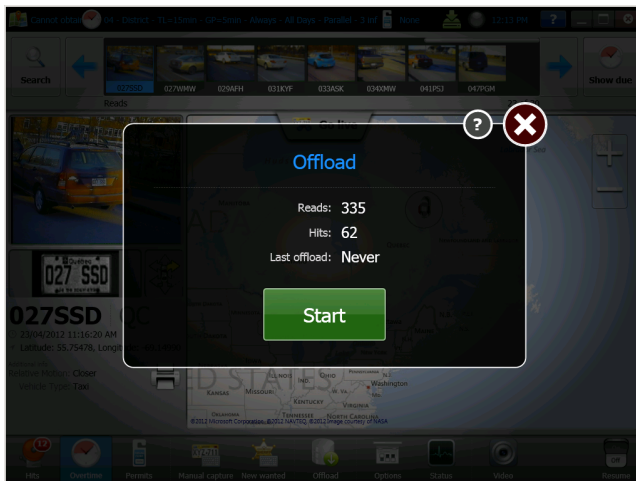

- 2 Tap **Start** > **OK**.

## After you finish

- If Genetec Patroller™ is configured to offload data wirelessly to Security Center, you don't need to do anything else. The offload is complete.
- If Genetec Patroller™ is configured to offload data to a folder on the in-vehicle computer's hard drive, you need to copy the data from the in-vehicle computer's *Offload* folder to a Flash drive, and then transfer that data to the *Offload* folder on the Security Center computer.
  - The default location of the *Offload* folder for the in-vehicle computer is **C:\**. However, a different location may have been specified on the **Offload** tab of Genetec Patroller™ Config Tool. For more information about offloading Genetec Patroller™ data, see the *Genetec Patroller Administrator Guide*.

- The default location of the *Offload* folder on the Security Center computer is *C:\Genetec\AutoVu\RootFolder\Offload*. However, a different location may have been specified by your Genetec Patroller™ Administrator in the **Properties** tab of the LPR Manager role. For more information about the LPR Manager role, see the *Security Center Administrator Guide*.

**Related Topics**

[Notification bar in Genetec Patroller](#) on page 10

## Using the Patroller Transfer Tool

You can use the Patroller Transfer Tool to transfer reads, hits, and other data between Genetec Patroller™ and Security Center. You must use this tool to transfer files if Genetec Patroller™ is not connected to Security Center by WiFi or cellular.

### Before you begin

Create and enable all required Overtime rules and Parking rules.

### What you should know

- The tool is available with Genetec Patroller™ 6.4 and later and can be launched from *C:\Program Files (x86)\Genetec AutoVu 6.X\Tools*.

**NOTE:** It is recommended that you copy the Patroller Transfer Tool to a USB media device so that it can be installed on the Security Center server machine.

- The tool transfers the contents of the configured RootFolder (default location: *C:\Genetec\AutoVu\RootFolder\ManualTransfer*).


The following data is transferred:

- Offload files (including reads and hits)
- Permits
- Hotlist
- Genetec Patroller™ settings and users
- Matcher settings
- Zones

### To transfer files using the Patroller Transfer Tool:

- 1 Launch the Patroller Transfer Tool.
- 2 From the *Where is this tool running from?* page, select whether you are running the tool on Genetec Patroller™ or Security Center Server.

**NOTE:** This page is only displayed the first time you run the tool.

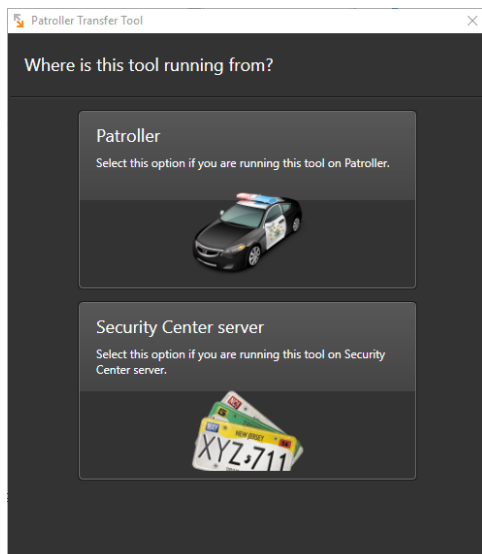

- 3 The tool guides you through the process of selecting your LPR Manager root folder (in Security Center), selecting your USB media device, and starting the file transfer.

**NOTE:** A Security Center system can have more than one LPR Manager role, and each role has its own root folder. The default location is *C:\Genetec\AutoVu*.

- 4 When the file transfer is complete, the tool ejects your USB media device.


## Configuring your Genetec Patroller™ options

To adjust the context camera according to the weather, or set basic volume settings, you can configure your Genetec Patroller™ options from the *Options* screen.



### To configure your Genetec Patroller™ options:

- 1 In the main Genetec Patroller™ window, tap **Options**.

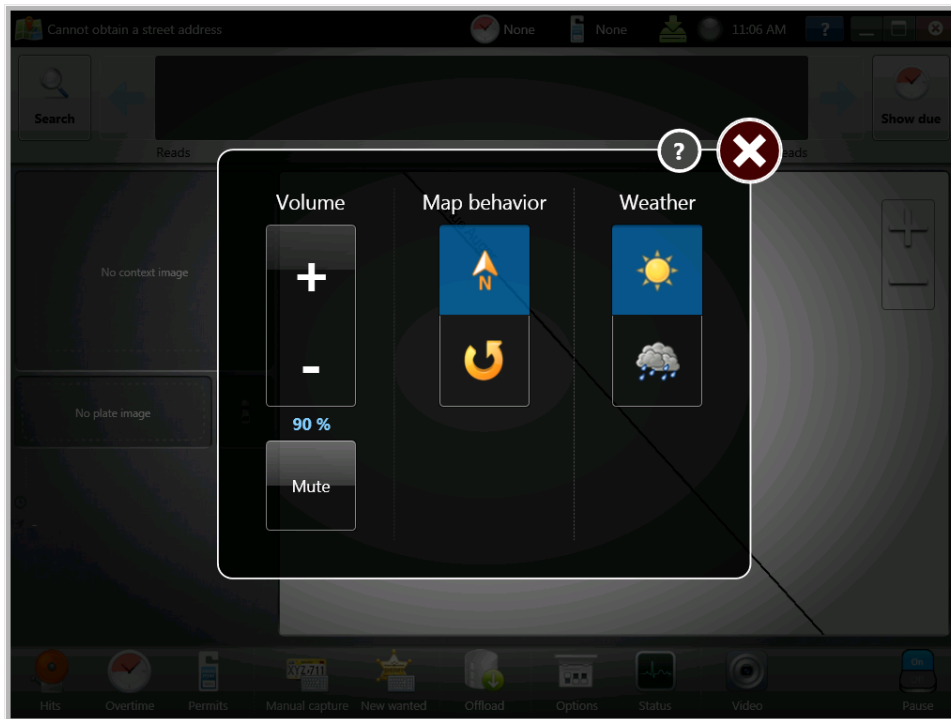**NOTE:** The following screenshot is an example. The information displayed in the window varies depending on the Genetec Patroller™ mode you are running.



- 2 Configure the following options:

- **Volume:** Adjust or mute the volume of Genetec Patroller™ sounds (e.g. reads, hits etc).
- **Map behavior:** Tap  if you want the Genetec Patroller™ to rotate as it changes direction (map always points north), or tap  if you want the map to rotate as Genetec Patroller™ changes direction (Genetec Patroller™ always points to the top of the screen).

**NOTE:** If Genetec Patroller™ was installed without maps or you are running MLPI mode, this option is not available.

- **Weather:** (Not required for SharpX cameras) Adjust the context camera for sunny or cloudy weather (e.g. on a cloudy day or at sunset, select the cloudy setting to increase the minimal exposure time and allow more light into the camera). This results in better image quality in low light environments.

- 3 Close the *Options* screen.

## Changing your password in Genetec Patroller™

---

If you require a username and password to log on to Genetec Patroller™, this option allows you to change your password.


### Before you begin

To change your password, you require the following:

- You must be connected to Security Center (e.g. in range of the wireless network).
- In Genetec Patroller™ Config Tool, the **Logon type** must be set to **Secure name and password** in the **General** page.

### To change your password:

- 1 In the main Genetec Patroller™ window, tap **Status**, then tap **Change password**. The Change password window appears.

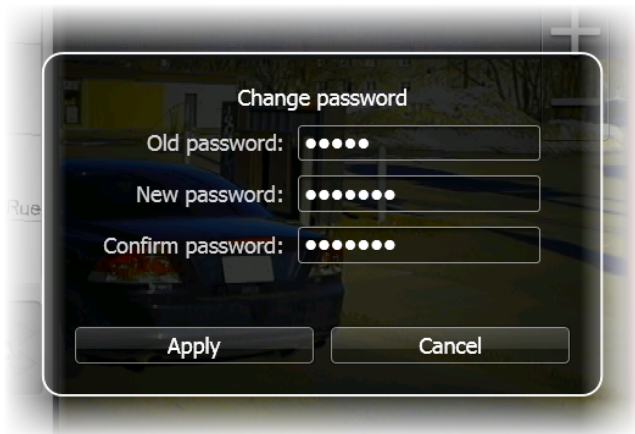

- 2 Enter your old password, new password, and then confirm your new password.
- 3 Tap **Apply** to change your password, or **Cancel** to discard your changes.

Your password has been changed.



## Viewing your Genetec Patroller™ statistics

If you want to see statistics about such things as the number of total reads or the number of accepted hits, you can check your Genetec Patroller™ statistics from the *Status* screen.


### What you should know

If some of the information does not fit on your screen, you can swipe the window up and down as needed.

#### To view your Genetec Patroller™ statistics:

- In the main Genetec Patroller™ window, tap **Status**, then tap **Statistics**.

**NOTE:** The following screenshot is an example. The information displayed in the window varies depending on the Genetec Patroller™ mode you are running.

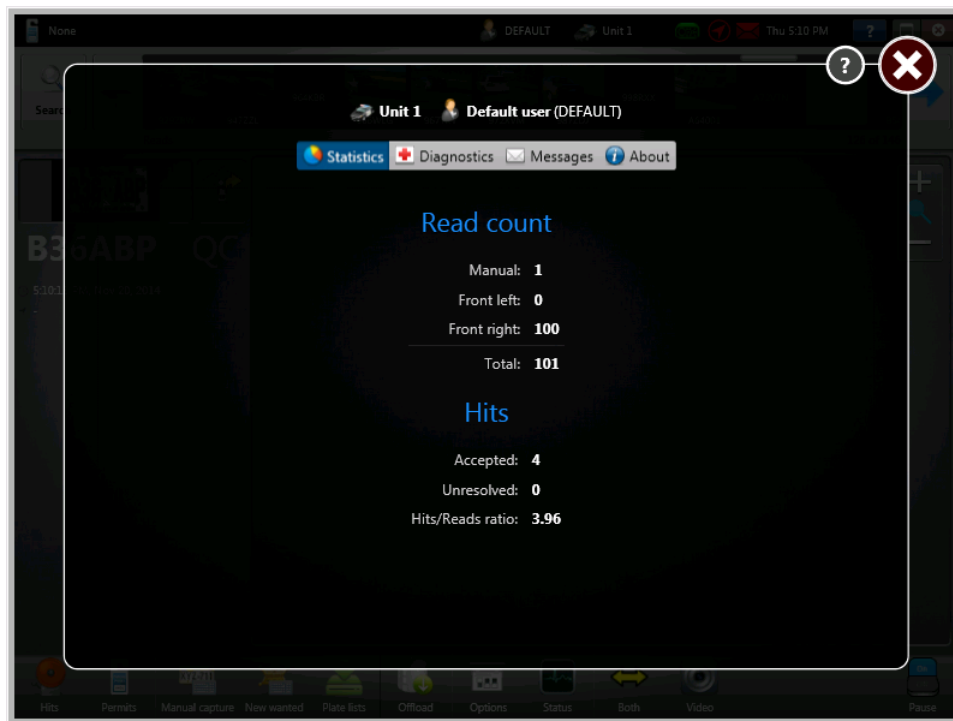

The Statistics window provides the following information:

**NOTE:** The camera information listed is dependent on the cameras that are installed and in use on the vehicle.

- **Manual:** Number of manually captured reads.
- **Front left/right:** Number of reads made by the front left/right LPR camera(s).
- **Rear left/right:** Number of reads made by the rear left/right LPR camera(s)
- **Front center/Rear center:** Number of reads made by the front or rear center camera(s).
- **Total:** Total reads made.
- **Zone:** (MLPI only) Shows the location of the Parking facility that is being patrolled.
- **Permit:** (City, University only) Shows the currently selected permit restriction (if applicable).
- **Overtime rule:** (City, University only) Shows the currently selected overtime rule (if applicable).
- **Count:** (City, University only) Shows how many hits received for the permit restrictions and overtime rules.


- **Accepted:** Number of hits you have accepted.
- **Unresolved:** Number of pending hits that you have not accepted or rejected.
- **Hits/Reads ratio:** The ratio of hits to reads.
- **Pending upload:** (City, University only) Shows how many reads must be uploaded and shared with other patrol vehicles registered with the same Plate link account.

## Viewing your downloaded plate lists in Genetec Patroller™

If you want to see information on files that were downloaded to Genetec Patroller™, such as hotlists or permit lists, you can view your list of downloads from the *Plate lists* screen.

### To view your downloaded plate lists:

- In the main Genetec Patroller™ window, tap **Status**, then tap **Plate lists**.

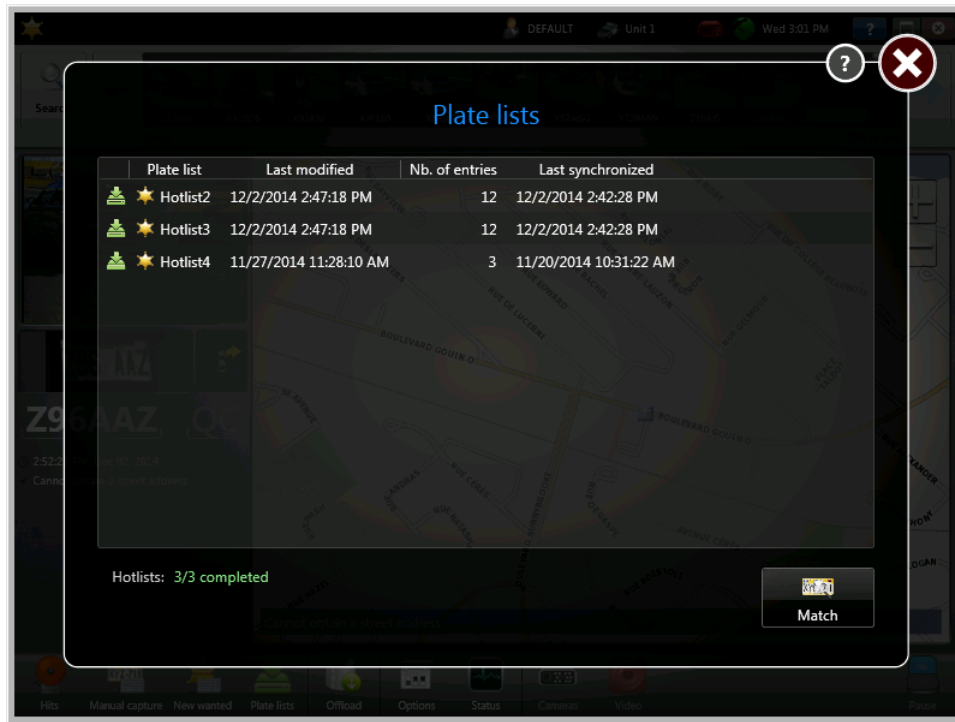

The Plate lists window provides the following information:

- **Status:** The status of the hotlist or permit list is displayed by the status indicator icon (🟢) located beside the plate list name. The color of the status indicator icon changes depending on the status of a hotlist or permit list download:
  - **Green:** Hotlist/permit list is loaded and ready.
  - **Yellow:** Hotlist/permit list is downloading.
  - **Red:** Error on Genetec Patroller™ side. Check for errors and/or restart the application.
  - **Grey:** There is no hotlist or permit list to load.
- **Plate list:** Name of the download file. The type of file downloaded is represented by the icon to the left of the file name. For example, a hotlist will display the law enforcement icon (👮) and a permit list will display the permit icon (📄).
- **Last modified:** When the file was last edited or changed. In the case of a hotlist, this is the time the hotlist was modified, not the time it was downloaded.
- **Nb. of entries:** The number of entries in the list.
- **Last synchronized:** When the file was last downloaded to Genetec Patroller™.

## Checking the status of AutoVu™ components

If you need to troubleshoot potential problems related to the various AutoVu™ components, you can check the status of these components from the *Status* screen. You can also generate a log file if you need Technical assistance.

### What you should know

If some of the information does not fit on your screen, you can swipe the window up and down as needed.

#### To check the status of AutoVu™ components:

- 1 In the main Genetec Patroller™ window, tap **Status**, then tap **Diagnostics**.

**NOTE:** The following screenshot is an example. The information displayed in the window varies depending on the Genetec Patroller™ mode you are running.



The Diagnostics window provides the following information:

- **State:** The state of the component (e.g. green, red, etc).
  - **Category:** Which category the component falls under (e.g. hardware, offload, etc).
  - **Message:** Detailed message about the status of the component.
- 2 If you want to save a diagnostic file to your desktop so that you can send it to Genetec Technical Assistance for troubleshooting your system, click **Create diagnostic file**.

## Viewing your list of error messages in Genetec Patroller™

If you are troubleshooting problems related to Genetec Patroller™ processes or services, you can view your list of error messages from the *Status* screen.


### What you should know

If some of the information does not fit on your screen, you can swipe the window up and down as needed.

#### To view your list of error messages:

- 1 In the main Genetec Patroller™ window, tap **Status**, then tap **Messages**.

The *Messages* window opens and the complete list of messages is displayed.

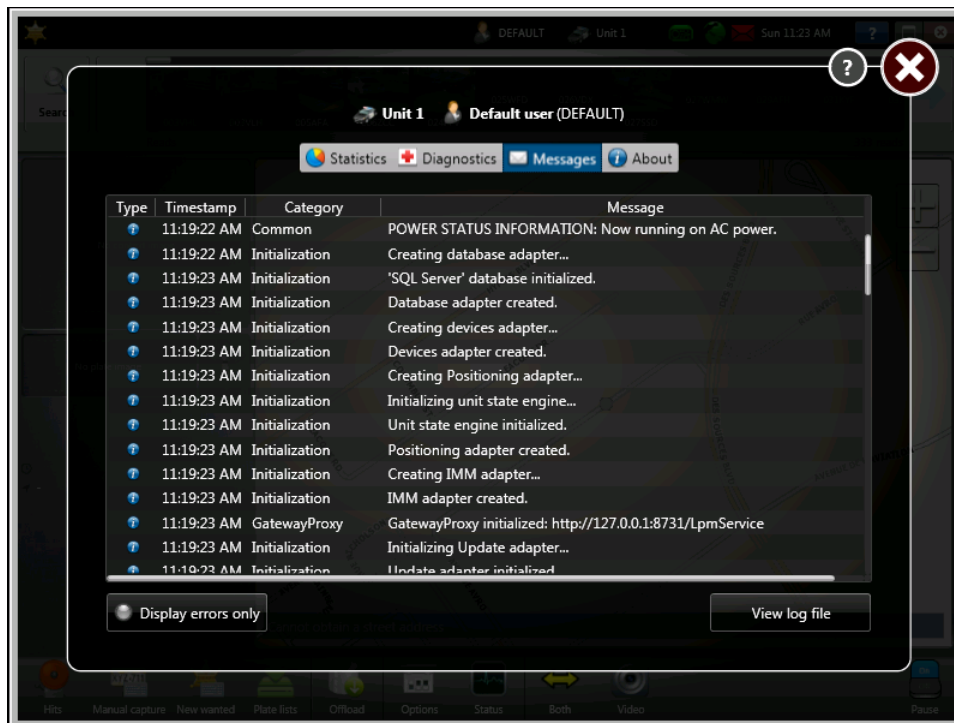

The Messages window provides the following information:


- **Type:** Type of message.
  - **Timestamp:** When the process occurred.
  - **Category:** Which category the process falls under (e.g. initialization, database, etc).
  - **Message:** Detailed message about the status of the process.
- 2 To show only the error messages, click **Display errors only**.  
To toggle back to the complete list of messages, click the **Display errors only** button again.
  - 3 (Optional) To view Genetec Patroller™ log file, click **View log file**.  
A *.log* file is generated.

## Checking your Genetec Patroller™ version

If you want to see what version of the Genetec Patroller™ software you are running, you can do so from the *Status* screen.

### To check your Genetec Patroller™ version:

- 1 In the main Genetec Patroller™ window, tap **Status**, then tap **About**.

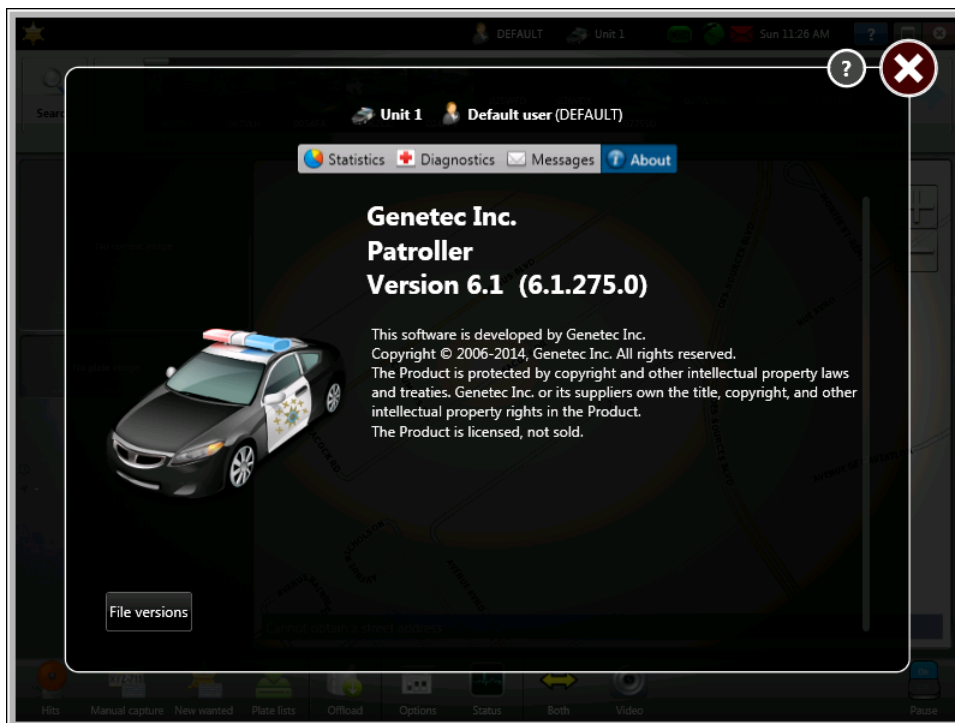

- 2 (Optional) Click **File versions** to display file version information that can help you troubleshoot Genetec Patroller™.

## Turning Sharp cameras on and off

If you have more than one Sharp camera installed on your vehicle, you can select which cameras are activated using Genetec Patroller™. You can also use the AutoVu™ car camera switch to activate the cameras, if the switch is installed in the vehicle.


### What you should know

If you have only one camera, you can use the Pause/Resume button in the Genetec Patroller™ main window to turn it on or off.

#### To turn Sharp cameras on and off in Genetec Patroller™:


- From the Genetec Patroller™ main window, do *one* of the following, depending on how Genetec Patroller™ is configured:
  - If you only have cameras installed on the front of the vehicle: tap **Left** (←), **Right** (→), or **Both** (↔) to turn on the corresponding Sharp camera.
 

You'll know which Sharp is active by the icon displayed. For example, if you see **Both** (↔), it means that both cameras are on and reading plates.
  - If you have cameras installed on both the front and rear, or just the rear of the vehicle: tap **Cameras**. The Cameras window opens, and you can turn any of them on or off. In the following example, only two cameras are shown (front-right and rear-left).

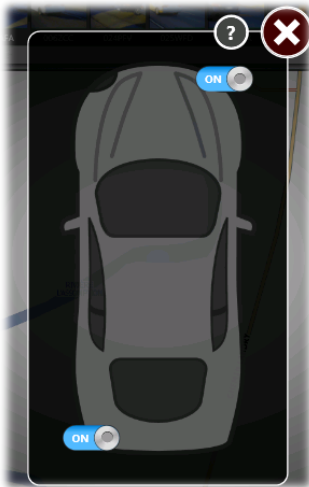

#### To turn Sharp cameras on and off using the AutoVu™ car camera switch:

- Use the right and left toggle switches to activate or deactivate the right and left Sharp cameras. The AutoVu™ car camera switch also includes LED lights to inform you of the current camera activation (red) and to show system power (blue).

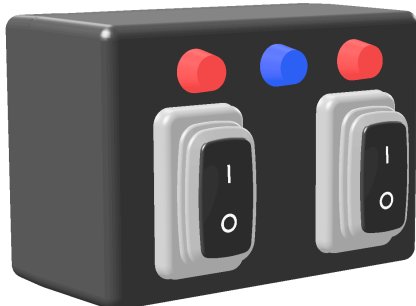





## Sharp camera icons

The icon displayed in the Genetec Patroller™ toolbar changes depending on how many Sharp cameras are installed on the vehicle, and where on the vehicle they are installed.

You can have up to 6 cameras installed. When you start Genetec Patroller™, you'll see one of the following icons:

**NOTE:** The right and left arrows might be greyed out if a camera is temporarily not working.


Icon	What it means
	This means you have two Sharp cameras installed (front-left and front-right), but only the front-left is reading plates.
	This means you have two Sharp cameras installed (front-left and front-right), but only the front-right is reading plates.
	This means you have two Sharp cameras installed (front-left and front-right), and both are reading plates.
	This means one of the following: <ul style="list-style-type: none"> <li>You have more than two Sharp cameras installed.</li> <li>You have one or more Sharp cameras installed, that are <i>not</i> installed on the default front-left or front-right of the vehicle.</li> </ul>



## Video window in Genetec Patroller™

The Video window allows you to view the live video from the Sharp context camera, LPR camera, and tire cameras (if applicable), to verify that the Sharps are working properly.

If the video is not working, the video icon will appear in red in the main window.

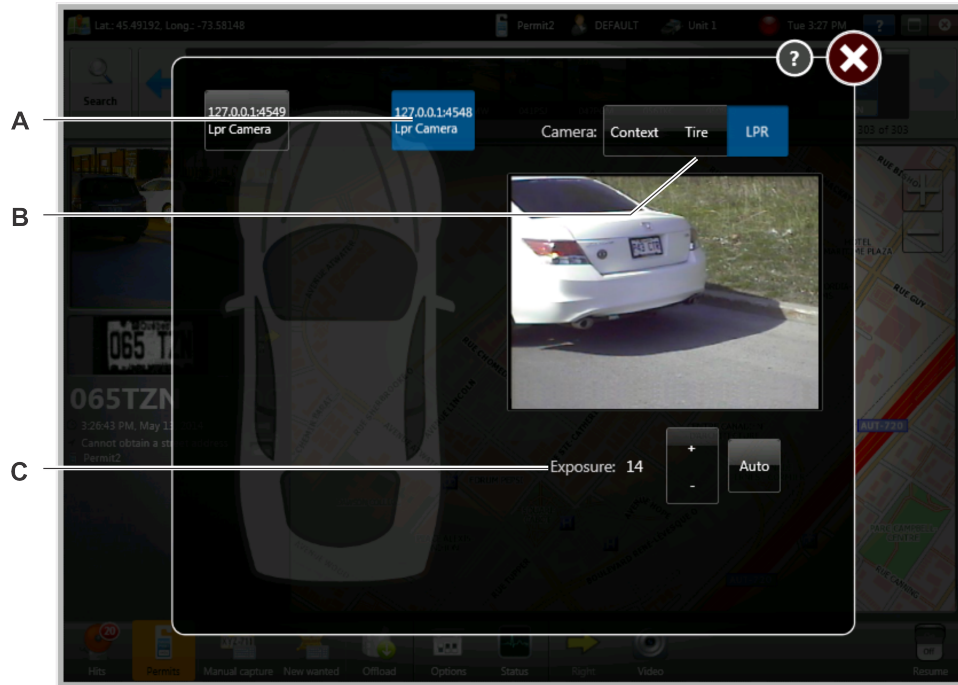

- |   |   |
|---|---|
| A | <p>Select which Sharp camera you want to view.</p> <p><b>NOTE:</b> Your configuration may be different than the one shown here.</p>   |
| B | <p>View video from the context camera or LPR camera. You can also view video from your tire cameras (if applicable).</p>  |
| C | <p>Use this setting to modify the exposure. You can use the + or - button to manually modify the exposure, or click <b>Auto</b> to let Genetec Patroller™ automatically calculate the exposure.</p> |

# Updating Genetec Patroller™ or Sharp Cameras

If you see the update icon in the notification bar, Genetec Patroller™ is ready to be updated.

## Before you begin

Close Patroller Config Tool.

## What you should know

The update icon (🔥) appears in the Genetec Patroller™ notification bar when you need to update Genetec Patroller™ or a connected Sharp. It means that one or more hotfixes have been downloaded and are ready to be installed. You can update the Genetec Patroller™ application, any connected Sharp camera, or receive new sound files to be used for hit alerts.

After updating, you have the option to roll back the updates, which restores Genetec Patroller™ and/or the Sharp(s) to the state they were in before you performed the update. A rollback is usually done for troubleshooting purposes.

You don't have to be connected to Security Center to perform an update. The update icon indicates that the updates are already downloaded to Genetec Patroller™, they just need to be installed. For example, this means that if you see the icon in the morning when you start your shift, you don't have to wait for the update to finish before driving out of WiFi range of the Security Center server.

### To update Genetec Patroller™ or a Sharp camera:

- 1 Tap the update icon (🔥) in the Genetec Patroller™ notification bar.  
A window appears displaying the available updates.



- 2 Tap the Genetec Patroller™ icon (or Sharp icon, if applicable) to proceed with the update.  
Genetec Patroller™ shuts down, and restarts when the update is complete.

## Automatic rollback in Genetec Patroller™

An automatic rollback occurs when Genetec Patroller™ fails to successfully process an update. This can occur because of an error with the hotfix file, or because the Updater Service is prevented from replacing a required file on the in-vehicle computer's hard drive (for example, you had Genetec Patroller™ Config Tool open when attempting the update).

Genetec Patroller™ shuts down to process an update. While Genetec Patroller™ is shut down, if the Updater Service can't complete the update, it automatically rolls back Genetec Patroller™ in the background. When Genetec Patroller™ starts back up, you'll see one of the following messages:

- **Update failed:** No part of the update was successful. You can try the update again, or contact the Genetec Patroller™ administrator for assistance.
- **Update partially succeeded:** Some of the updates were successful. You can see more information about the errors on the *Messages* page, or contact the Genetec Patroller™ administrator for assistance.

### Related Topics


[Viewing your list of error messages in Genetec Patroller](#) on page 40

## Rolling back Genetec Patroller™ or Sharp updates

After you have updated Genetec Patroller™, you have the option of rolling back those updates and restoring Genetec Patroller™ to the state it was in before you performed the update.

### To roll back Genetec Patroller™ or Sharp upgrades:

- 1 Close the Genetec Patroller™ window.  
The Genetec Patroller™ log off screen appears.

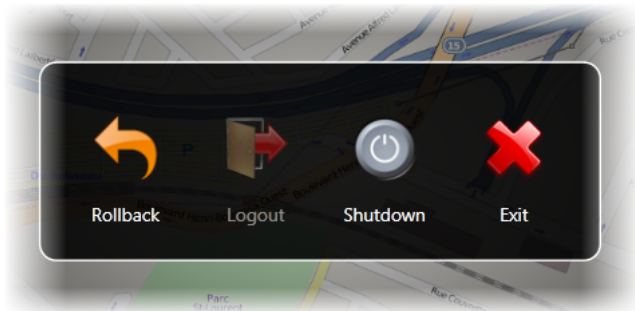

- 2 Tap **Rollback**.  
A window appears displaying the available rollback options.
- 3 Tap the Genetec Patroller™ or Sharp icon to proceed with the rollback.  
Genetec Patroller™ shuts down, and restarts when the rollback is complete.

# Using the custom MLPI application on the handheld computer

This section includes the following topics:

- ["Starting the custom MLPI application"](#) on page 48
- ["Selecting a location in Genetec Patroller"](#) on page 49
- ["Capturing license plate information in Genetec Patroller"](#) on page 51
- ["Importing data into Security Center from Genetec Patroller"](#) on page 53

## Starting the custom MLPI application

The Genetec approved handheld computer is a rugged device with an integrated camera that lets you manually collect license plate information and export it to Security Center.

### Before you begin

You must copy the following folders from the Security Center server to the handheld computer:

- The MLPI application folder (MLPISmartDevice12 or MLPISmartDevice20).
- The *Zones.xml* folder.

For information about creating and configuring parking facilities in Security Center, see the *Security Center Administrator Guide*.

### What you should know

On startup, the eyeWARE application is automatically started as well. If you close eyeWARE, you'll need to restart the application to resume capturing vehicle reads.

#### To start the custom MLPI application:

- 1 On the handheld computer, navigate to the location where you copied the custom MLPI application folder: *My Device\SystemCF\<Name of MLPI folder>\MLPISmartDevice12 or MLPISmartDevice20*.
- 2 Tap **Genetec.LicensePlateManagement.MLPI.SmartDevice.exe**.

The start page appears.



- |          |  |
|----------|--|
| <b>A</b> | Tap to view the Assembly version and application copyright information.                |
| <b>B</b> | Tap to capture an image. This button is available once you have selected a location.   |
| <b>C</b> | Tap to set the location within a parking facility.                                     |
| <b>D</b> | Once you have selected a location, you can tap to scroll between rows in the location. |

### After you finish

[Select a location](#) to start capturing plate images.

#### Related Topics

[Selecting a location in Genetec Patroller](#) on page 49

## Selecting a location in Genetec Patroller™


You must select a location before you can capture license plate images.

### Before you begin


[Start the custom MLPI application.](#)

#### To select a location:

- 1 From the Main screen, tap **NO LOCATION SELECTED**.
- 2 To select your location, you can choose between two views:
  - **Route view:** Displays all the zones and rows in the parking facility. The default view is the Route view.

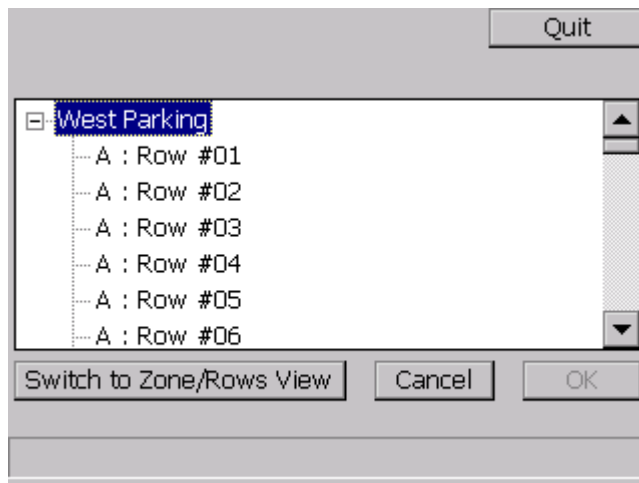

- **Zones/Rows view:** Display the rows in a hierarchal view, where rows are grouped under their zone, and zones grouped by parking facility.

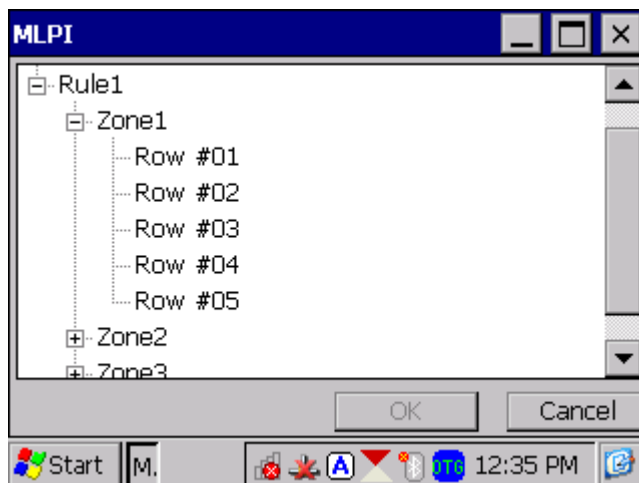

- 3 Tap **OK**.  
The Start page appears.

### After you finish

[Start capturing plate images.](#)

**Related Topics**

[Capturing license plate information in Genetec Patroller](#) on page 51

# Capturing license plate information in Genetec Patroller™


Once the location is selected you can start taking license plate images.

## Before you begin

Select a location.

## What you should know

The *Viewfinder* screen displays a live feed from the camera. Once you have taken a picture of the license plate and entered the license plate number and state, you can then save the license plate information to an XML file. Each capture produces its own XML file.

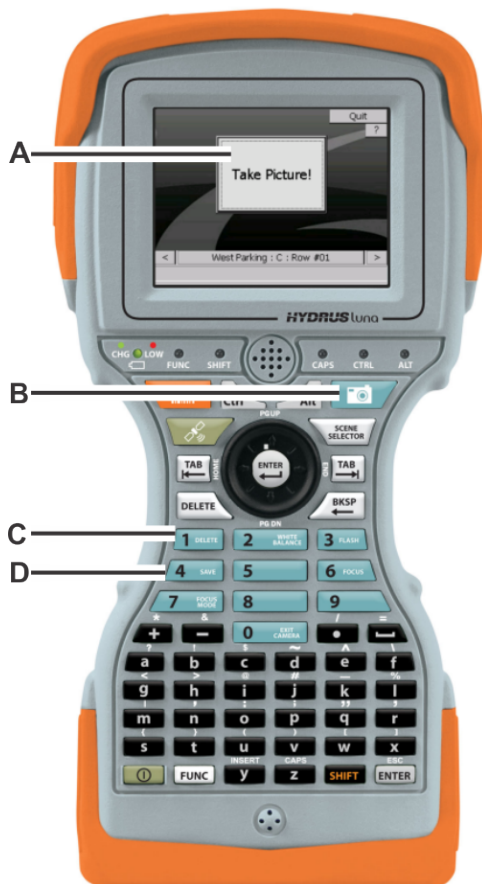


- |   |               |
|---|---------------|
| A | Start page    |
| B | Camera button |
| C | Delete button |
| D | Save button   |

### To take a license plate picture:

- 1 From the Start page, tap **Take Picture**.




- 2 Position camera as required, and press the **Camera**  button.

You'll have 15 seconds to take a picture before returning to the Start page.

- 3 Do one of the following:

- To delete the image, press **1**.  
The Start page appears.
- To save the image, press **4**.

The *Save Image* page appears, where you can preview the captured image and enter the plate information.

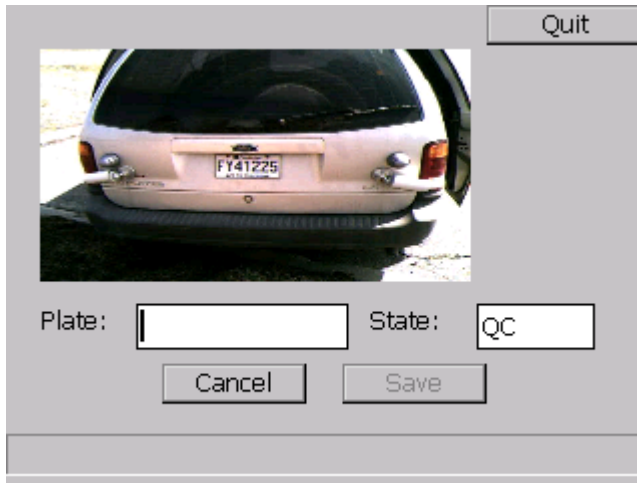

- 4 In the **Plate** field, enter the license plate number.  
The **Save** button is available once you have entered the plate value.
- 5 (Optional) In the **State** field, enter the state value.  
The state value is the value you entered in the application configuration file. For more information on changing the state value, see the *Genetec Patroller™ Administrator Guide*.
- 6 Do one of the following:
  - Tap **Cancel** to discard the captured image and return to the Start page.
  - Tap **Save**. A message page appears indicating if the save was successful or not, then the Start page appears.

The plate information is exported to an XML file. The path to the file is `<Application Folder>\Reads\<ReadId>.xml`. For example, if your application folder is `ProgramFiles\Mlpi`, then the destination folder for all reads is `ProgramFiles\Mlpi\Reads`.

## After you finish

[Import data into Security Center.](#)

### Related Topics

[Importing data into Security Center from Genetec Patroller](#) on page 53

# Importing data into Security Center from Genetec Patroller™

---

Once you have collected all the plate information, you can import the data into Security Center so that the reads are available to Security Desk users.

## **Before you begin**

Specify the XML data folder for the LPR Manger in Security Center Config Tool, using the **XML import** option in the LPR Manager configuration tabs. For more information about XML import, see the *Security Center Administrator Guide*.

### **To import data into Security Center:**

- Once you have collected all the plate information, copy contents of the *Reads* folder on the handheld computer to the XML data folder of Security Center.  
The reads are imported, are available to Security Desk users. The files are then deleted from the folder.

# Troubleshooting

This section describes some of the common issues you may encounter while using Genetec Patroller, and provides possible solutions and workarounds. The solutions described here are based on the assumption that the application was installed with the default settings.

This section includes the following topics:

- ["Troubleshooting: Blank screen when Genetec Patroller system starts"](#) on page 55
- 56 • ["Troubleshooting: Log on failed \(invalid credentials\) in Genetec Patroller"](#) on page
- 57 • ["Troubleshooting: Log on failed \(locked user account\) in Genetec Patroller"](#) on page
- page 58 • ["Troubleshooting: Genetec Patroller is running but not receiving plate reads"](#) on
- 59 • ["Troubleshooting: Sharp losing connectivity and live feed not working"](#) on page
- ["Troubleshooting: Genetec Patroller not generating hits for plates on a known hotlist"](#) on page 60
- ["Troubleshooting: Manual capture of plate on a known hotlist not generating a hit in Genetec Patroller"](#) on page 61
- 62 • ["Troubleshooting: Offload takes longer than usual in Genetec Patroller"](#) on page
- 63 • ["Troubleshooting: Sharp not detected after docking in-vehicle computer"](#) on page
- 64 • ["Troubleshooting: Cannot review acknowledged hits in Genetec Patroller"](#) on page
- ["Troubleshooting: Problems after upgrading Genetec Patroller "](#) on page 65
- 66 • ["Troubleshooting: Blue screen in Context Camera screen in Sharp Portal "](#) on page

# Troubleshooting: Blank screen when Genetec Patroller™ system starts

---

If your screen is blank when the system starts, you can troubleshoot the issue.

## **What you should know**

**CAUSE:** The screen might be blank because your LPR Processing Unit is off.

### **TRY THIS:**

- Verify that the LPR Processing Unit controlling the SharpX camera units is on. The LPR Processing Unit is usually installed in the vehicle's trunk.

## Troubleshooting: Log on failed (invalid credentials) in Genetec Patroller™

---

If you cannot log on, you can troubleshoot the issue.

### **What you should know**

**CAUSE:** You might be using the wrong credentials.

**TRY THIS:**

- Contact your supervisor and make sure that your username and password are correct.

# Troubleshooting: Log on failed (locked user account) in Genetec Patroller™

---

If you cannot log on and you are locked out of your account, you can troubleshoot the issue.

## What you should know

**CAUSE:** You have exceeded the number of unsuccessful logon attempts allowed by your Genetec Patroller™ administrator.

**TRY THIS:**

- 1 Close the Genetec Patroller™ application.
- 2 Contact your administrator to change your password.
- 3 Restart Genetec Patroller™, and log on with your new password.

# Troubleshooting: Genetec Patroller™ is running but not receiving plate reads

---

If Genetec Patroller™ is running but you are not receiving any plate reads, you can troubleshoot the issue.

## What you should know

**CAUSE:** The Genetec Patroller™ reads might be paused, or Genetec Patroller™ might not be connected to the Sharp cameras.

### TRY THIS:

- In the main Genetec Patroller™ window, verify that the **Pause/Resume reads** toggle is set to **On**.
- Verify that Genetec Patroller™ is connected to the Sharp cameras as follows:
  - a) From the main Genetec Patroller™ window, click **Video**.
  - b) Make sure that you can view a live video feed from the camera.

# Troubleshooting: Sharp losing connectivity and live feed not working

---

If the Sharp is losing connectivity and the live feed is not working, you can troubleshoot the issue.

## What you should know

**CAUSE:** There might be a problem with the ethernet cable or wire connections. The Sharp camera might also be offline, or there might be a hardware or software issue.

### TRY THIS:

- 1 Verify that the ethernet cable is plugged in to both the in-vehicle computer and the LPR Processing Unit (which is usually located in the trunk).
- 2 Ping the Sharp camera from your in-vehicle computer to verify that the computer can "see" the camera, as follows:

You must know the IP address of the Sharp camera.

- a) In the in-vehicle computer, tap **Start > Accessories > Command Prompt**.
  - b) In the Command Prompt, type `ping <IP address of Sharp camera> -t`, and press **Enter** on your keyboard.
  - c) Do one of the following:
    - If you see a reply from the specified IP address, contact your Genetec Patroller™ administrator. The problem may be related to the software running on the Sharp camera.
    - If you receive the message "request timed out", the problem may be hardware-related (e.g. your computer's ethernet card), or related to the setup of the in-vehicle network. For example, your computer may not have a network address in the same range as the Sharp cameras. For more information, contact your Genetec Patroller™ administrator.
- 3 The camera connection to the SharpX LPR Processing Unit may not be wired correctly. In this case, the SharpX will still read plates, but the live feed will not be displayed. Contact your Genetec Patroller™ administrator if you suspect this may be the issue.



# Troubleshooting: Genetec Patroller™ not generating hits for plates on a known hotlist

---

If Genetec Patroller™ is not generating hits for license plates on a known hotlist, you can troubleshoot the issue.

## What you should know

**CAUSE:** The "hit delay" or "reject count" settings might be enabled.

### TRY THIS:

- Make sure that your Genetec Patroller™ administrator has not specified a "hit delay".  
A "hit delay" specifies that the same plate number cannot generate multiple hits within a certain time period.
- Make sure that your Genetec Patroller™ administrator has not specified a "reject count" for the Genetec Patroller™ unit.  
A "reject count" specifies that after a predetermined number of unacknowledged hits, Genetec Patroller™ automatically rejects all subsequent hits.

# Troubleshooting: Manual capture of plate on a known hotlist not generating a hit in Genetec Patroller™

---

If you manually capture a license plate from a known hotlist but does not generate a hit, you can troubleshoot the issue.

## What you should know

**CAUSE:** Genetec Patroller™ might not have successfully downloaded the hotlist or parsed the hotlist file, a "hit delay" setting might be enabled, or you might have entered the license plate incorrectly.

### TRY THIS:

- Verify that Genetec Patroller™ has successfully downloaded the hotlist, as follows:
  - a) In Genetec Patroller™, click **Plate lists**.
  - b) Make sure that the hotlist file you are interested in is shown on the **Plate lists** page with the correct date and time.
- Verify that Genetec Patroller™ has successfully parsed the hotlist file, as follows:
  - a) In Genetec Patroller™, click **Status**, and then go to the **Diagnostics** page.
  - b) Check if there are any errors associated with the hotlist file.
    - If there are errors listed, one of the following issues may have occurred:
      - The content or structure of the data within the hotlist file may have changed.
      - The file name or the extension of the hotlist file may have changed.
    - Contact your Genetec Patroller™ administrator for more information.
- Make sure that your Genetec Patroller™ administrator has not specified a "hit delay".

A "hit delay" specifies that the same plate number cannot generate multiple hits within a certain time period.

## Troubleshooting: Offload takes longer than usual in Genetec Patroller™

---

If your offload takes longer than usual, you can troubleshoot the issue.

### **What you should know**

**CAUSE:** You might be out of range from the network.

**TRY THIS:**

- If you're using a wireless network to offload your data, make sure that you're in range of the wireless network.

## Troubleshooting: Sharp not detected after docking in-vehicle computer

---

If your Sharp is not detected after docking the in-vehicle computer, you can troubleshoot the issue.

### **What you should know**

**CAUSE:** After you disconnect and then reconnect the Genetec Patroller™ computer from its in-vehicle dock, it might take between 10 to 30 seconds for the computer to detect the Sharp camera's network connection. If the connection has not been re-established after 30 seconds, there might be a connection issue with the computer.

### **TRY THIS:**

- Disconnect and reconnect the computer to the dock again.

# Troubleshooting: Cannot review acknowledged hits in Genetec Patroller™

---

If you cannot review acknowledged hits, you can troubleshoot the issue.

## What you should know

**CAUSE:** The **Enable reviews** setting may be turned off (it is on by default).

### TRY THIS:

- 1 Open Patroller Config Tool.
- 2 Select **User interface**.
- 3 On the **General** tab, turn on the **Enable reviews** setting.

# Troubleshooting: Problems after upgrading Genetec Patroller™

---


If you are experiencing problems after you have updated Genetec Patroller™, you can roll back the updates and restore Genetec Patroller™ to its previous state.

## What you should know

An automatic rollback occurs if Genetec Patroller™ fails to successfully process an update.

### To troubleshoot problems after upgrading Genetec Patroller™:

- 1 Close the Genetec Patroller™ window.  
The Genetec Patroller™ log off screen appears.

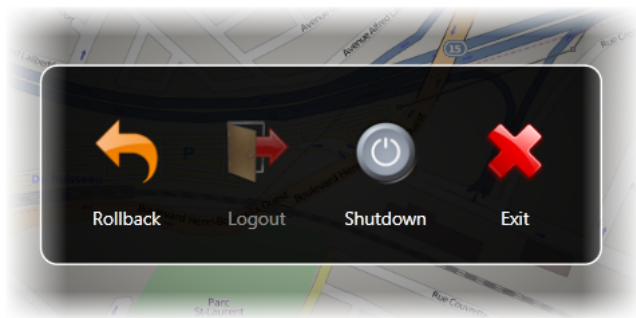

- 2 Tap **Rollback**.  
A window appears displaying the available rollback options.
- 3 Tap the Genetec Patroller™ or Sharp icon to proceed with the rollback.

### Related Topics

[Rolling back Genetec Patroller or Sharp updates](#) on page 46

[Automatic rollback in Genetec Patroller](#) on page 46

# Troubleshooting: Blue screen in Context Camera screen in Sharp Portal

---

If you see a blue screen in Context Camera image in the **Live feed** tab of the Sharp Portal, you can troubleshoot the issue.

## What you should know

**CAUSE:** The Sharp cable might not be connected properly.

**TRY THIS:**

- Verify that the Sharp cable is properly connected.

# Where to find product information

You can find our product documentation in the following locations:

- **Genetec™ TechDoc Hub:** The latest documentation is available on the TechDoc Hub. To access the TechDoc Hub, log on to [Genetec™ Portal](#) and click [TechDoc Hub](#). Can't find what you're looking for? Contact [documentation@genetec.com](mailto:documentation@genetec.com).
- **Installation package:** The Installation Guide and Release Notes are available in the Documentation folder of the installation package. These documents also have a direct download link to the latest version of the document.
- **Help:** Security Center client and web-based applications include help, which explain how the product works and provide instructions on how to use the product features. Genetec Patroller™ and the Sharp Portal also include context-sensitive help for each screen. To access the help, click **Help**, press F1, or tap the ? (question mark) in the different client applications.



# Technical support

Genetec™ Technical Assistance Center (GTAC) is committed to providing its worldwide clientele with the best technical support services available. As a customer of Genetec Inc., you have access to TechDoc Hub, where you can find information and search for answers to your product questions.

- **Genetec™ TechDoc Hub:** Find articles, manuals, and videos that answer your questions or help you solve technical issues.

Before contacting GTAC or opening a support case, it is recommended to search TechDoc Hub for potential fixes, workarounds, or known issues.

To access the TechDoc Hub, log on to [Genetec™ Portal](#) and click [TechDoc Hub](#). Can't find what you're looking for? Contact [documentation@genetec.com](mailto:documentation@genetec.com).

- **Genetec™ Technical Assistance Center (GTAC):** Contacting GTAC is described in the Genetec™ Lifecycle Management (GLM) documents: [Genetec™ Assurance Description](#) and [Genetec™ Advantage Description](#).

## Additional resources

If you require additional resources other than the Genetec™ Technical Assistance Center, the following is available to you:

- **Forum:** The Forum is an easy-to-use message board that allows clients and employees of Genetec Inc. to communicate with each other and discuss many topics, ranging from technical questions to technology tips. You can log in or sign up at <https://gtapforum.genetec.com>.
- **Technical training:** In a professional classroom environment or from the convenience of your own office, our qualified trainers can guide you through system design, installation, operation, and troubleshooting. Technical training services are offered for all products and for customers with a varied level of technical experience, and can be customized to meet your specific needs and objectives. For more information, go to <http://www.genetec.com/support/training/training-calendar>.

## Licensing

- For license activations or resets, please contact GTAC at <https://gtap.genetec.com>.
- For issues with license content or part numbers, or concerns about an order, please contact Genetec™ Customer Service at [customerservice@genetec.com](mailto:customerservice@genetec.com), or call 1-866-684-8006 (option #3).
- If you require a demo license or have questions regarding pricing, please contact Genetec™ Sales at [sales@genetec.com](mailto:sales@genetec.com), or call 1-866-684-8006 (option #2).

## Hardware product issues and defects

Please contact GTAC at <https://gtap.genetec.com> to address any issue regarding Genetec™ appliances or any hardware purchased through Genetec Inc.